

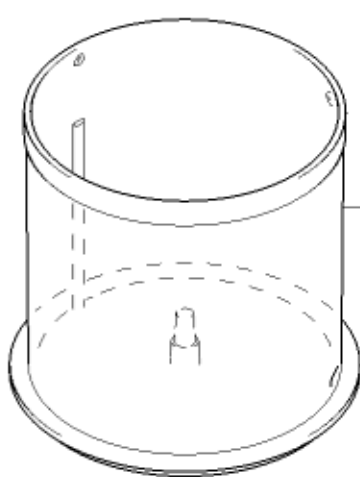
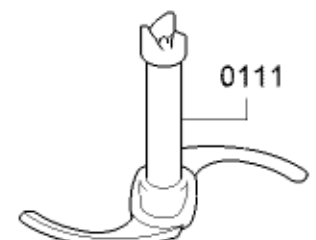
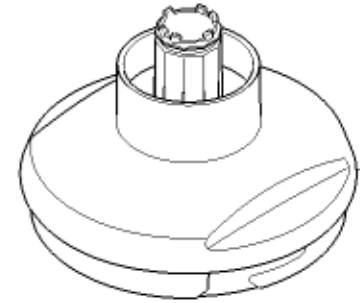
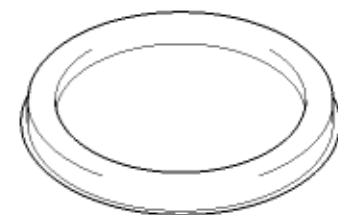
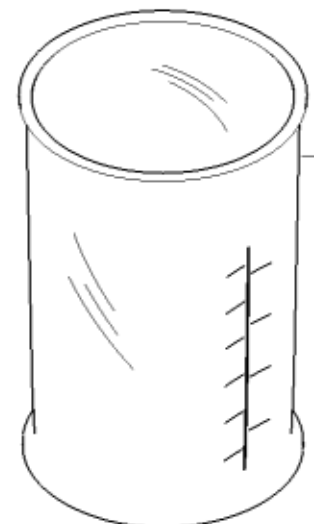
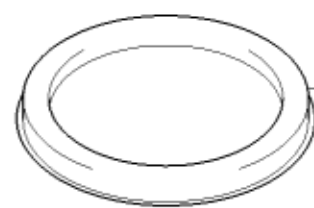
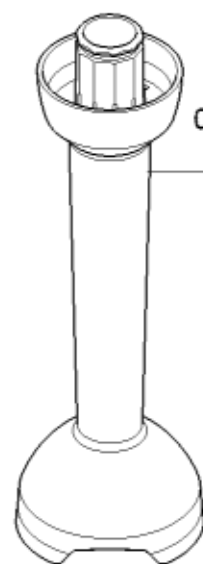


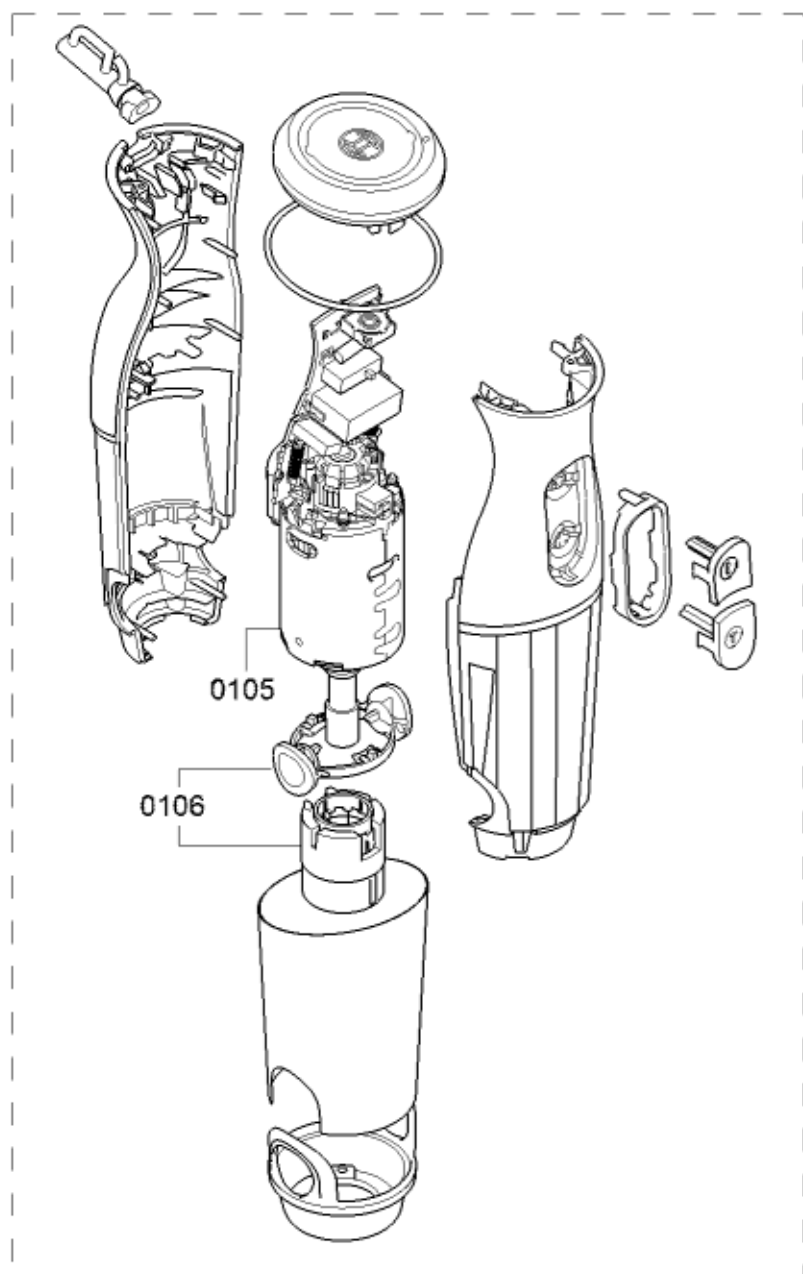

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0101	00753477		Antrieb
0102	00753475		Mixer
0103	00657243		Messbecher
0104	00630718		Deckel
0107	00753478		Getriebe
0108	00753122		Universalzerkleinerer
0110	00630938		Deckel
8012	12028091		Bürste
0105	12035538		Motor
0106	10016147		Auswurfhebel
0111	00629985	00615742	Messer
0112	00647801		Mixbecher

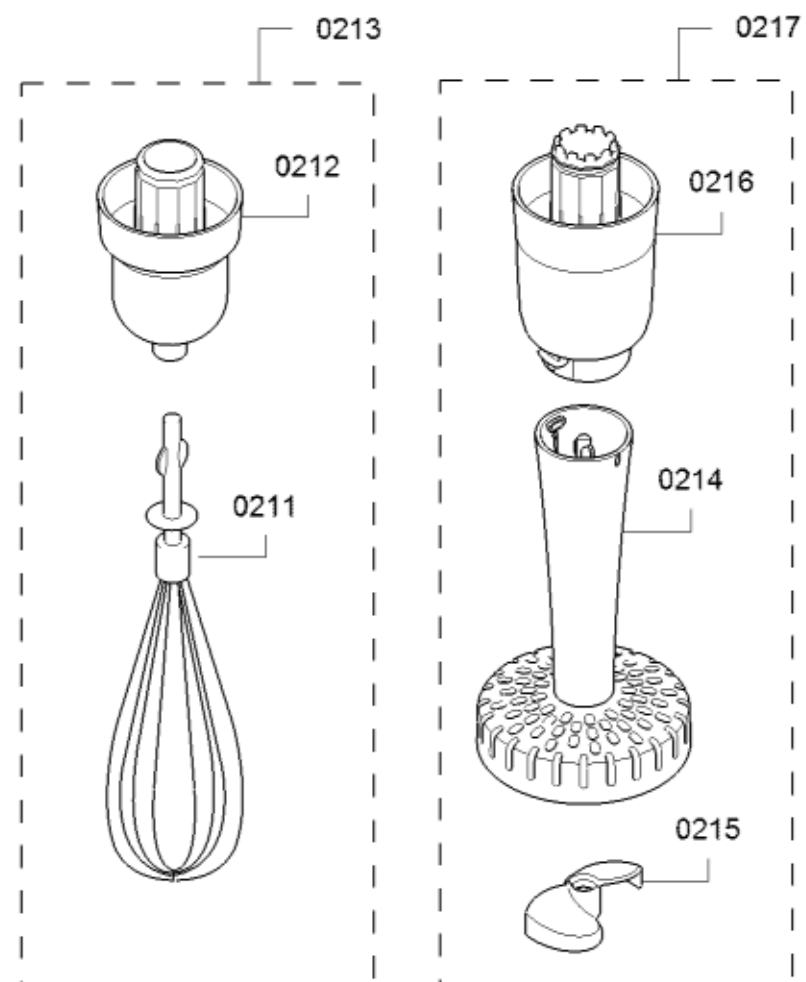

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
8012	12028091		Bürste
0211	00657378		Rührbesen
0212	00629984		Getriebe
0213	00753124		Rührbesen
0214	00753229		Vorsatz
0215	00629702		Messer
0216	00629986		Getriebe
0217	00753479		Passierstab