


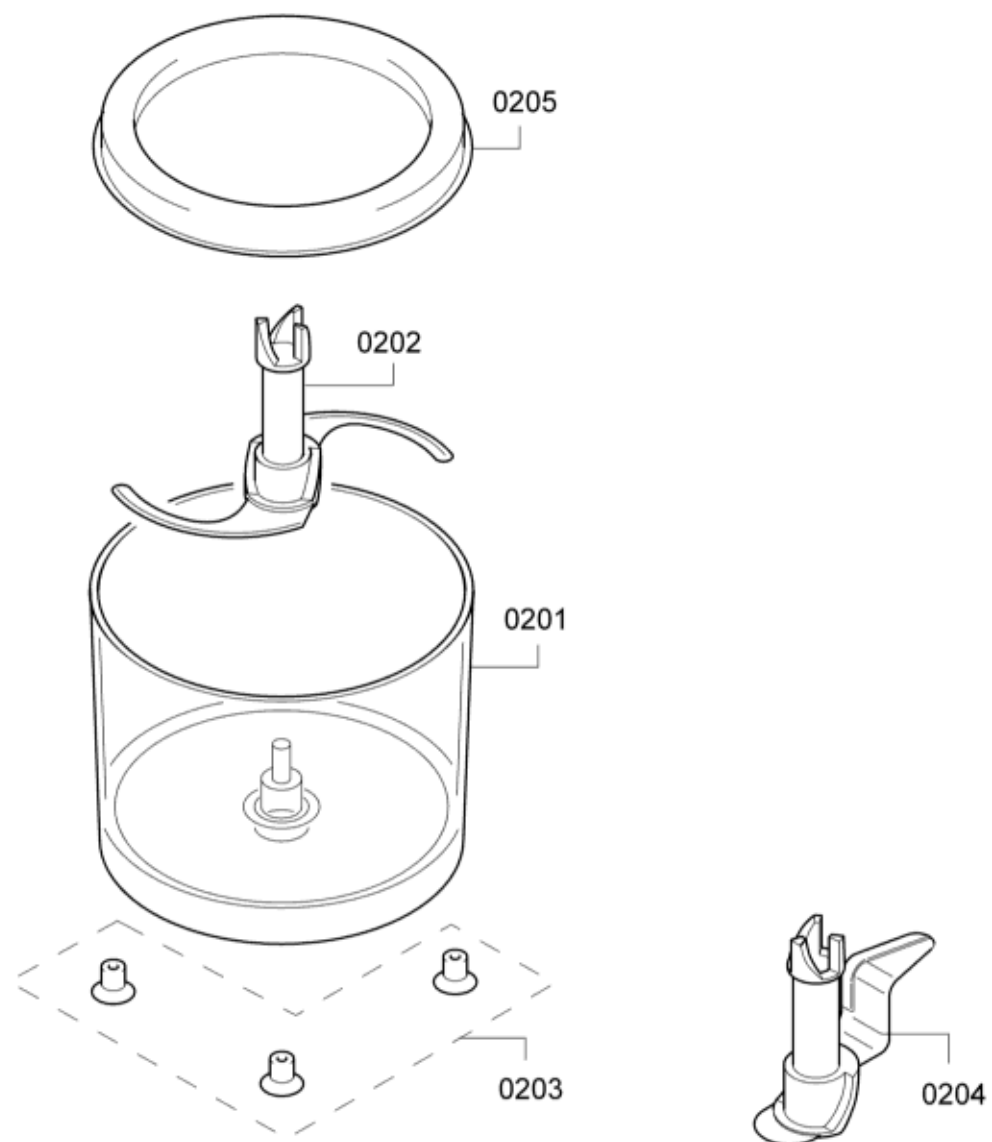
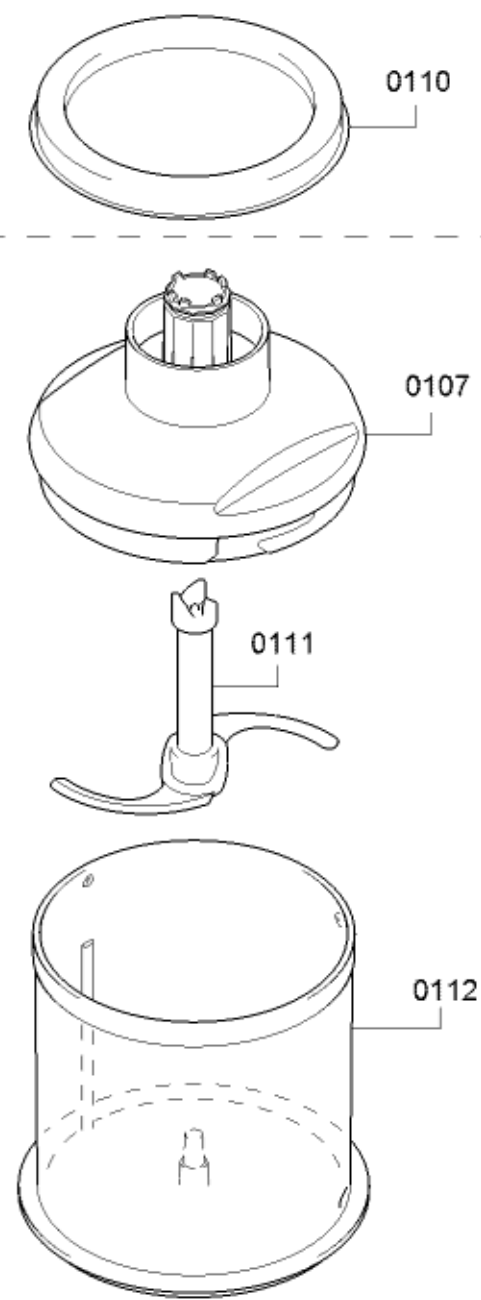
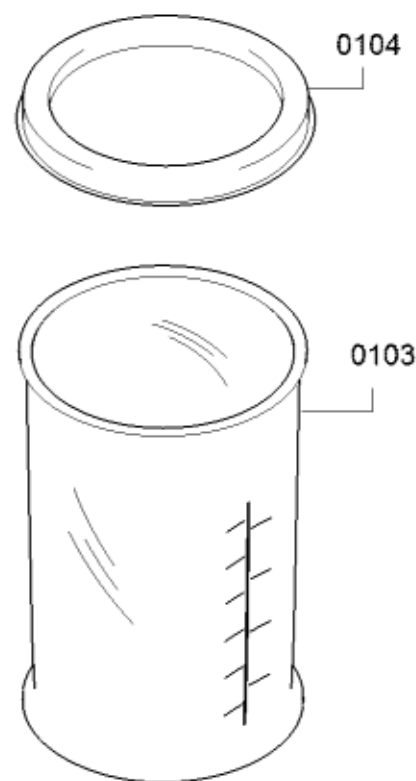
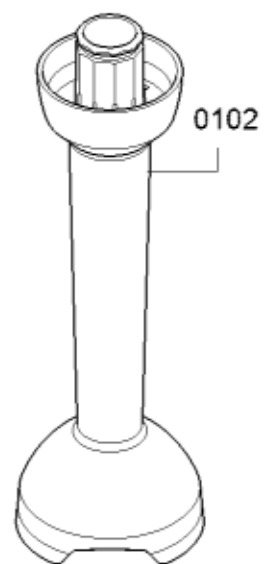
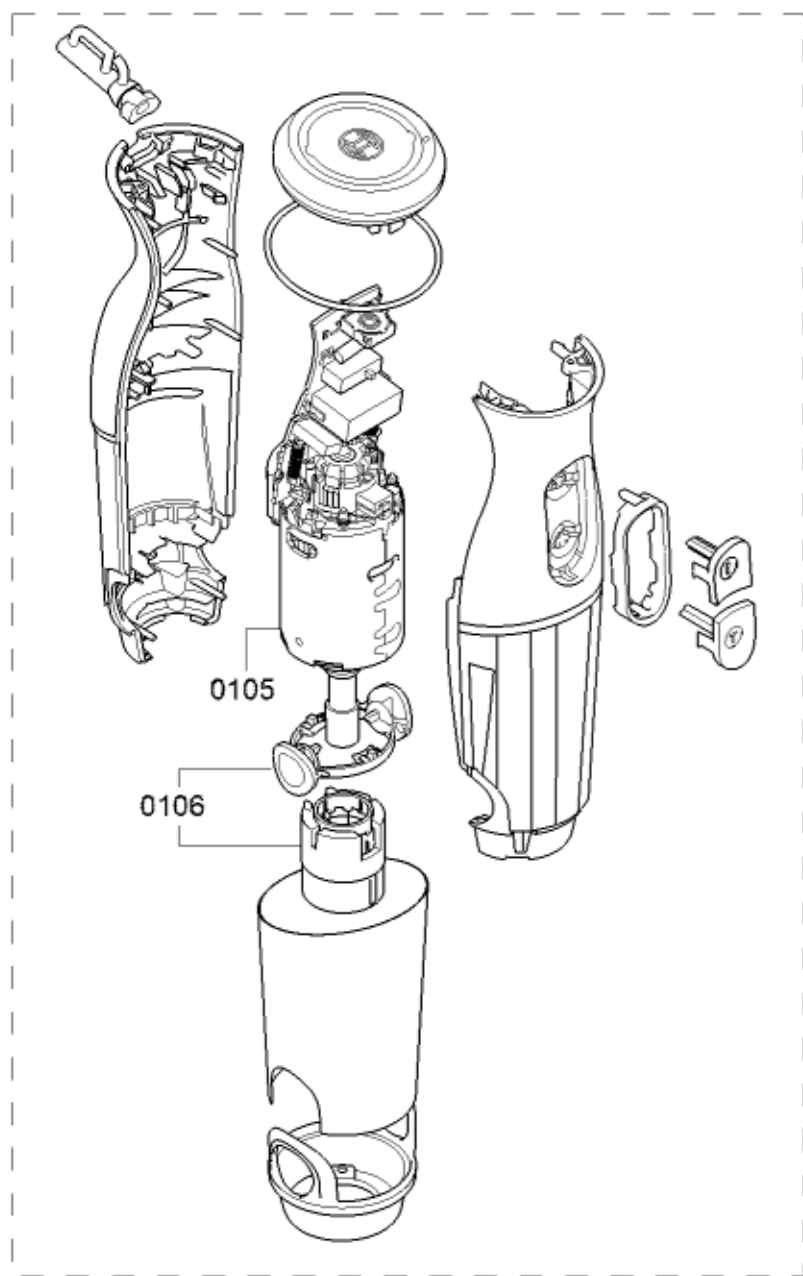


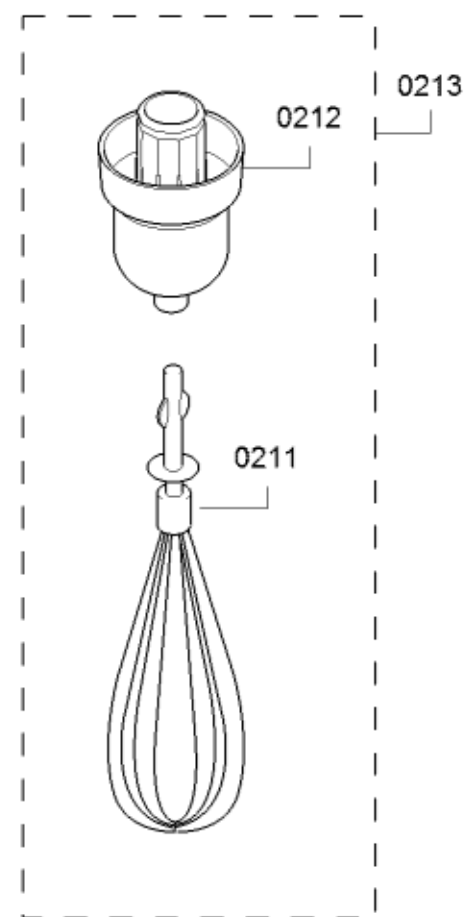

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0205	00630938		Deckel
0202	00611303	00167715	Messer
0201	00751402		Becher
0203	00152047	10000212	Gummifuss
0204	00611304	00416533	Messer
8012	12028091		Bürste
0211	00657378		Rührbesen
0212	00629984		Getriebe
0213	00753124		Rührbesen

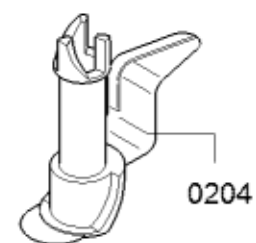

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0101	00753477		Antrieb
0102	00753475		Mixer
0103	00657243		Messbecher
0104	00630718		Deckel
0107	00753478		Getriebe
0108	00753122		Universalzerkleinerer
0110	00630938		Deckel
8012	12028091		Bürste
0105	12035538		Motor
0106	10016147		Auswurfhebel
0111	00629985	00615742	Messer
0112	00647801		Mixbecher

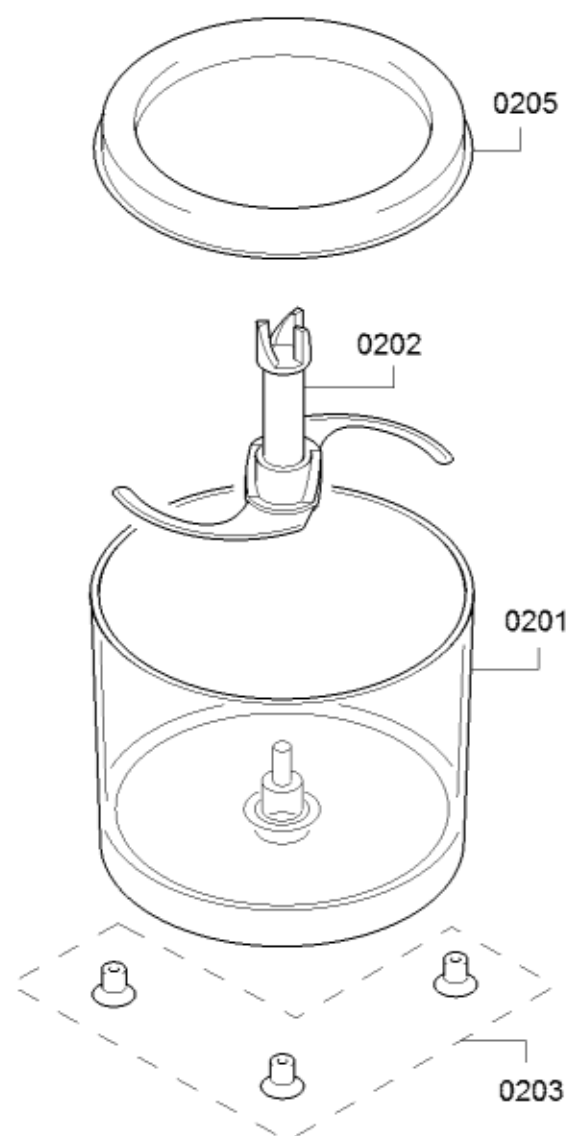

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0205	00630938		Deckel
0202	00611303	00167715	Messer
0201	00751402		Becher
0203	00152047	10000212	Gummifuss
0204	00611304	00416533	Messer
8012	12028091		Bürste
0211	00657378		Rührbesen
0212	00629984		Getriebe
0213	00753124		Rührbesen