 
 


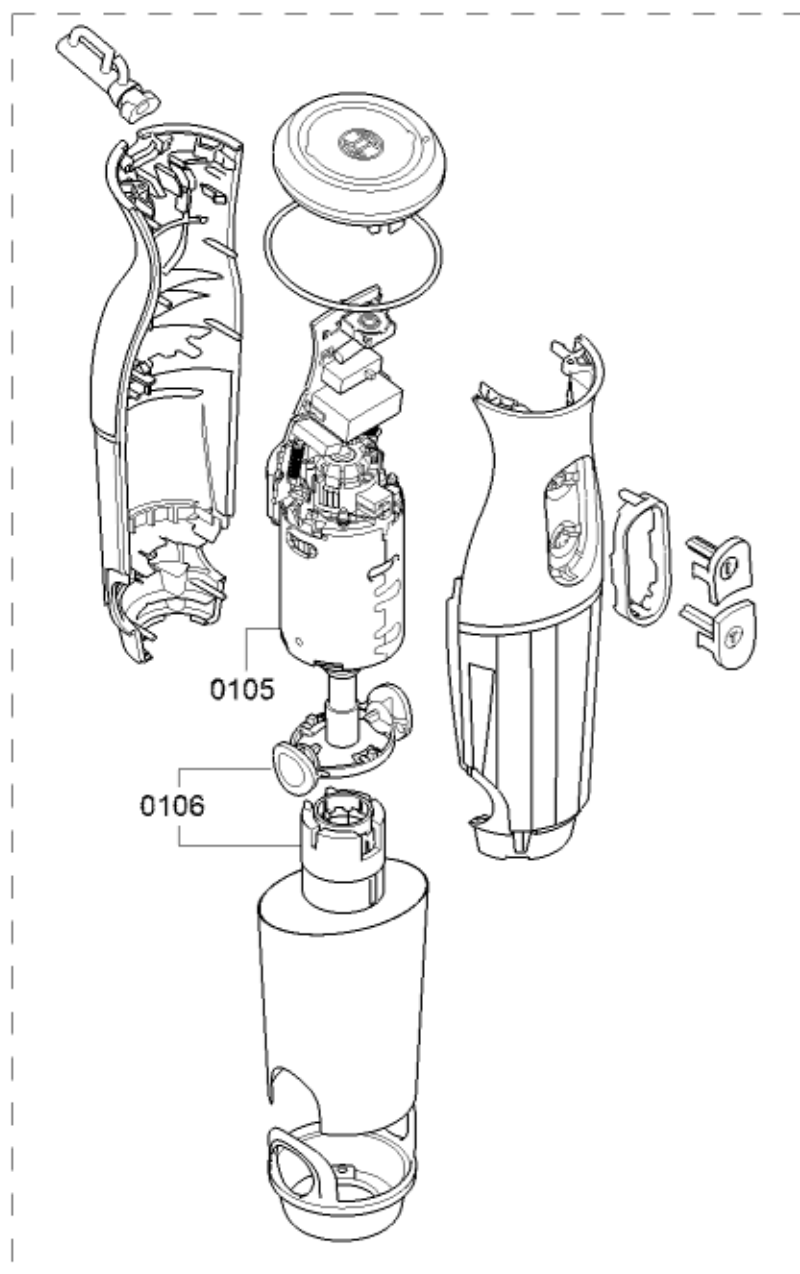


0101

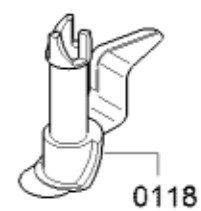


0118

 
0108

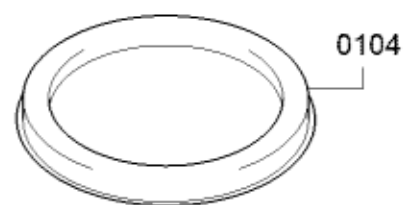


0104

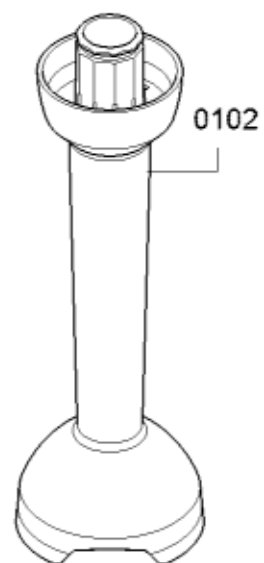 


0102

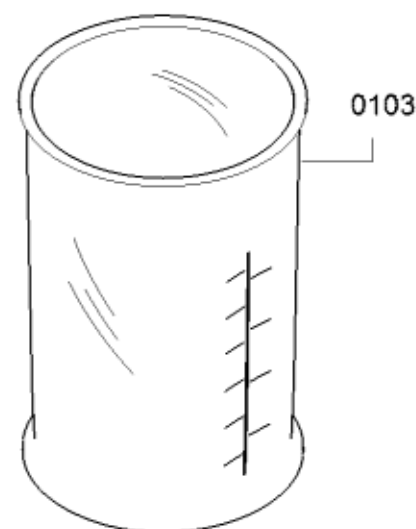 


0103

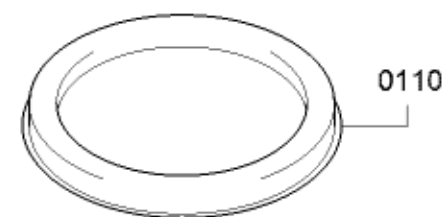 


0110

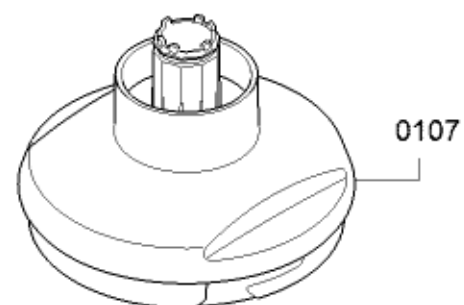 


0107

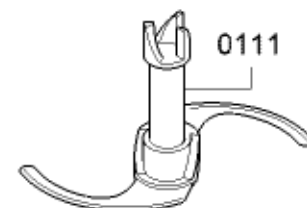 

0111




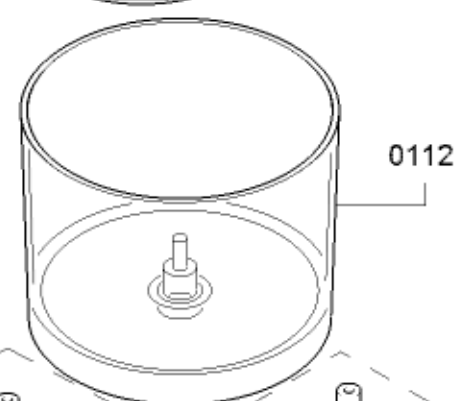 


0112

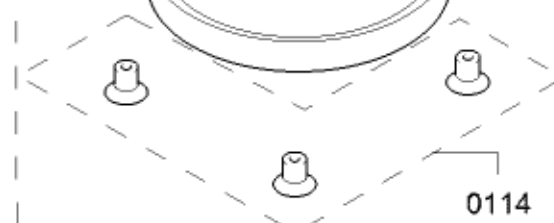 

0114

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0102	00753475		Mixer
0103	00657243		Messbecher
0104	00630718		Deckel
0107	00753478		Getriebe
0108	00753480		Universalzerkleinerer
0110	00630938		Deckel
0114	00152047	10000212	Gummifuss
0118	00611304	00416533	Messer
0101	12004741		Antrieb
8000	00753479		Passierstab
8012	12028091		Bürste
8051	00653180		Tasche
0105	12035538		Motor
0106	10016147		Auswurfhebel
0111	00611303	00167715	Messer
0112	00751402		Becher

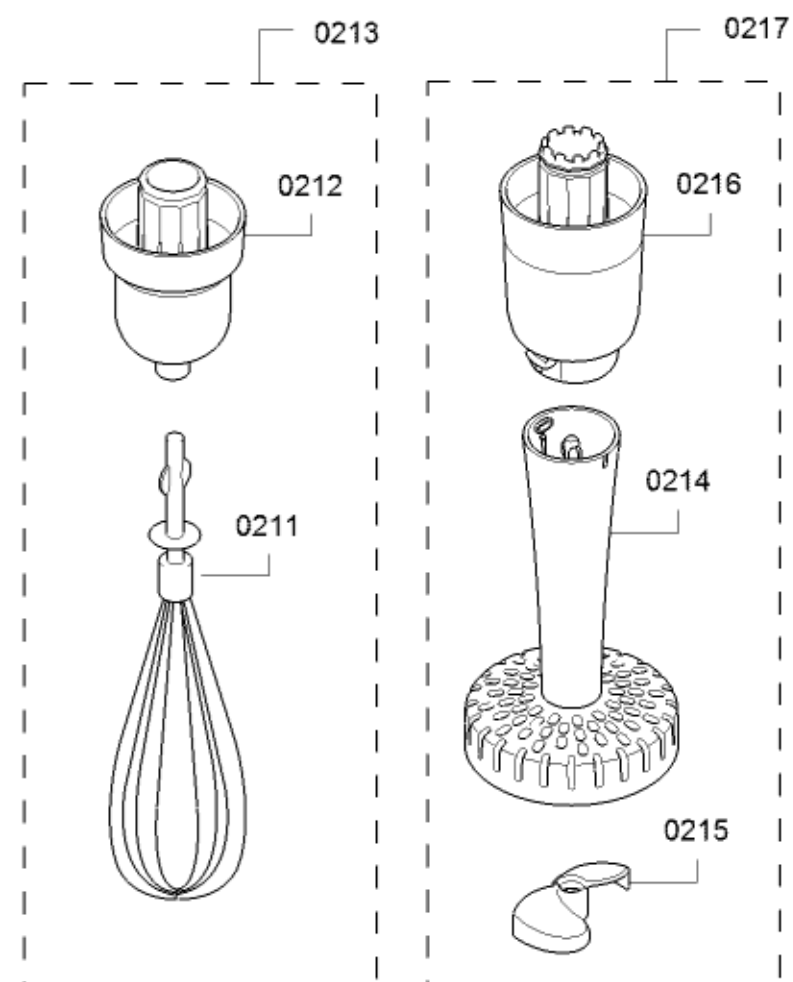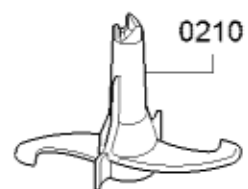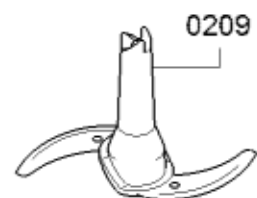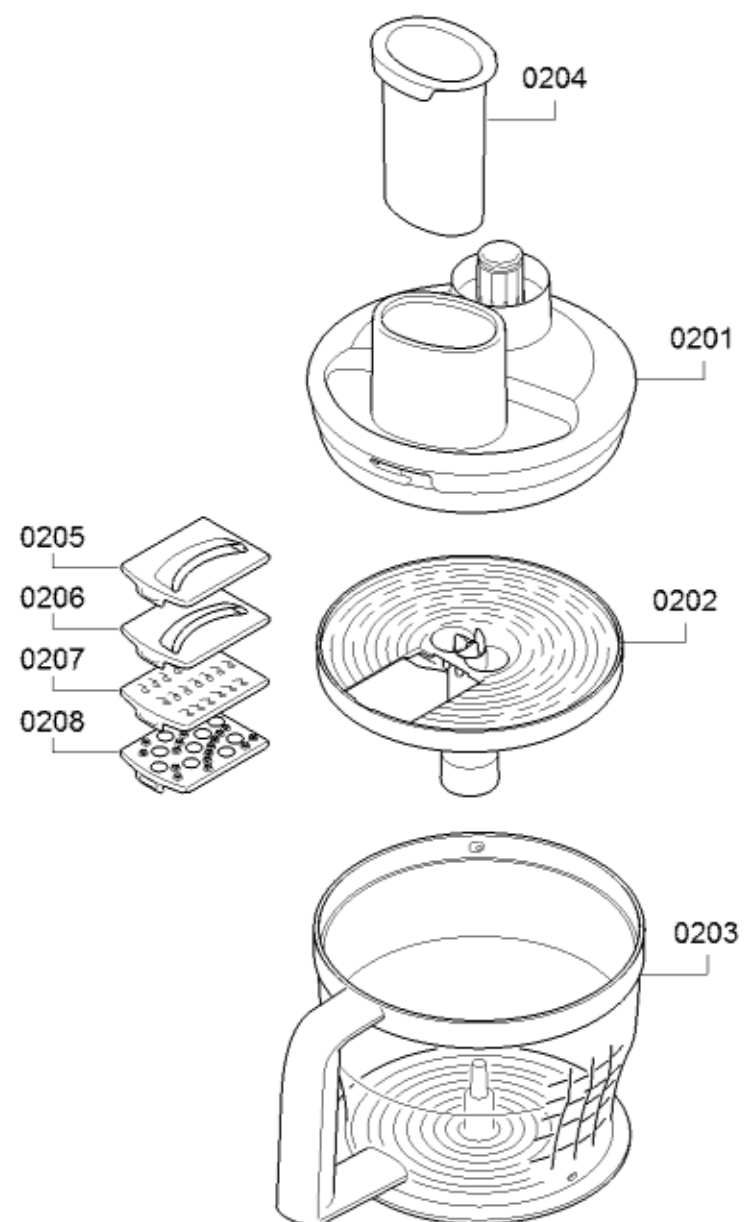    

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0201	00753481		Getriebe
0202	00753482		Träger
0203	00748750		Becher
0204	00653325		Stößel
0205	00618123		Scheibe
0206	00618102		Scheibe
0207	00622019		Scheibe
0208	00622020		Scheibe
0209	00629987		Messer
0210	00629988		Knethaken
8000	00753479		Passierstab
8012	12028091		Bürste
8051	00653180		Tasche
0211	00657378		Rührbesen
0212	00629984		Getriebe
0213	00753124		Rührbesen
0214	00753229		Vorsatz
0215	00629702		Messer
0216	00629986		Getriebe
0217	00753479		Passierstab